

iLONDA

PondFeeder

MANUAL

Outdoor Water-Proof

Timing And Quantitative

10L

Please read this manual carefully before using the pond feeder.

01 PARTS

1. Container cover (with LCD display panel)
2. Feeder container
3. Battery compartment
4. Discharge port
5. Two cover plates for pellets (Avoid of fodder obstruction)
6. Pellets dispenser with brushes
7. Cover plate for adjusting the throwing angle (Prevent the rain from splattering and sprinkling)

 


02 FUNCTION SETTING


General Function Buttons:

1. On - Off Switch
(if the button is pressed no food come out, Press the button again).
2. (SET) button: After pressing the (FEED) button, (SET) button allows the respectively displayed times to be chosen.
3. (+) button: After pressing the (SET) button, the effected symbol (either hours or minutes) blinks respectively and it can be set to a higher number with (+) button.
4. (FEED) button: Feeding time for 1 to 4/8 can be set by this button.
5. LCD display: Show time and setting
6. (MANUAL) button: Press the button to (FEED), When pressing the button, LCD display the feeding time and number of pellets in each second released.
7. Battery check button: Press the button to check the remaining battery.
8. Battery charge screen: 6V valid for 1 month (It is not recommended to out. of battery before charging) Will shorten the service life of battery.

Battery model

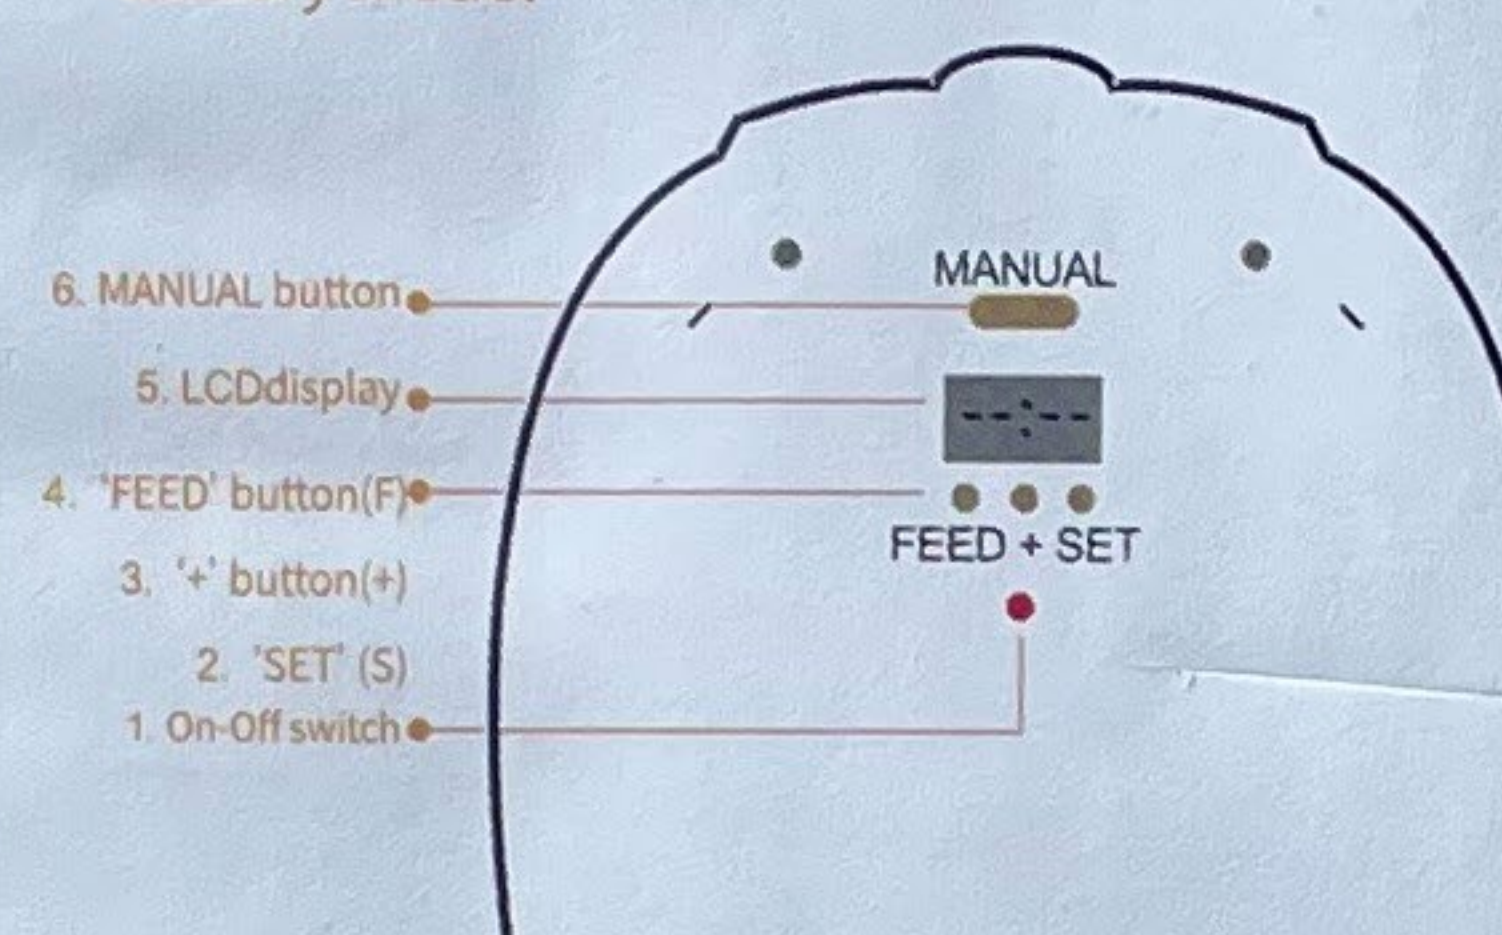

Batter version

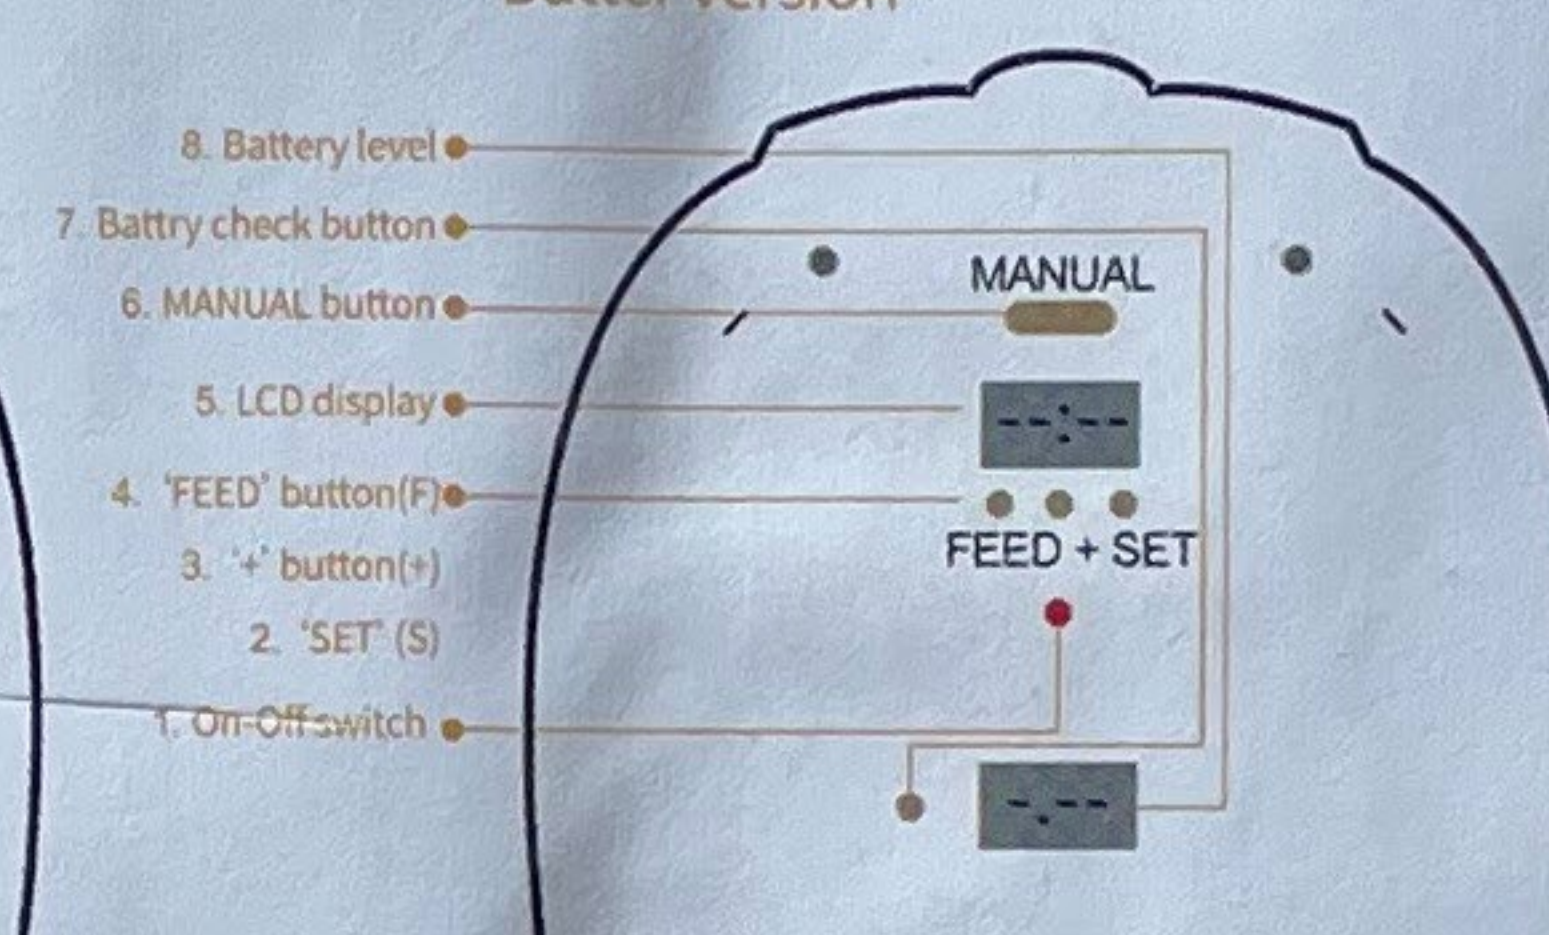 


Operating Instruction:

1. Programming local time;
 - a. Press (SET) button, hours blink, then press (+) button to set the hours.
 - b. Press (SET) button, minutes blink, then press (+) button to set the minutes.
 - c. Press the (SET) button again to confirm, then finish the local time setting.
2. Feeding time (4/8 gears of feeding time can be set) and feeding duration set;
 - a. Press (FEED) button, LCD displays " --:-- ". It means to enter the Program Feeding Time1
 - b. Press (SET) button, hours blink, then press (+) button to set the hours; Press (SET) button again when the minutes blinks to set the minutes.
 - c. After setting the feeding time, press the mode key (FEED) again, LCD screen displays "--:-- ", press the adjusting key (+) button to adjust the feeding duration (amount of feeding), and the duration can be set freely from 1-60 seconds.
 - d. To Program Feeding Time2-8, the steps are the same as Program Feeding Time1.
3. After setting the above feeding time, press the mode button (FEED) again to check whether the feeding time and the number of times are correct, and they will be displayed on the LCD screen.
 1. time to check the 1 setting, 2. time to check the 2 setting, 3. time to check the 3 setting,
 4. time to check the 4 setting, 5. time to check the (1+4) setting,
 6. time to check the (2+4) setting, 7. time to check the (3+4) setting,
 8. time to check the (1+3+4) setting)
4. Cancel/restore the set feeding time (up to 4/8 gears of feeding time) and feeding duration;
 - a. Press the mode key (FEED), to select the time span you want to cancel, then press the adjustment key (+) to cancel, and press the adjustment key (+) again to restore.

03 FILLING SETTING


 
Open the container cover and clean the drum before filling a amount of feed. Then place the cover back. The pond feeder is suitable for pellet feed ($d \leq 9\text{mm}$).

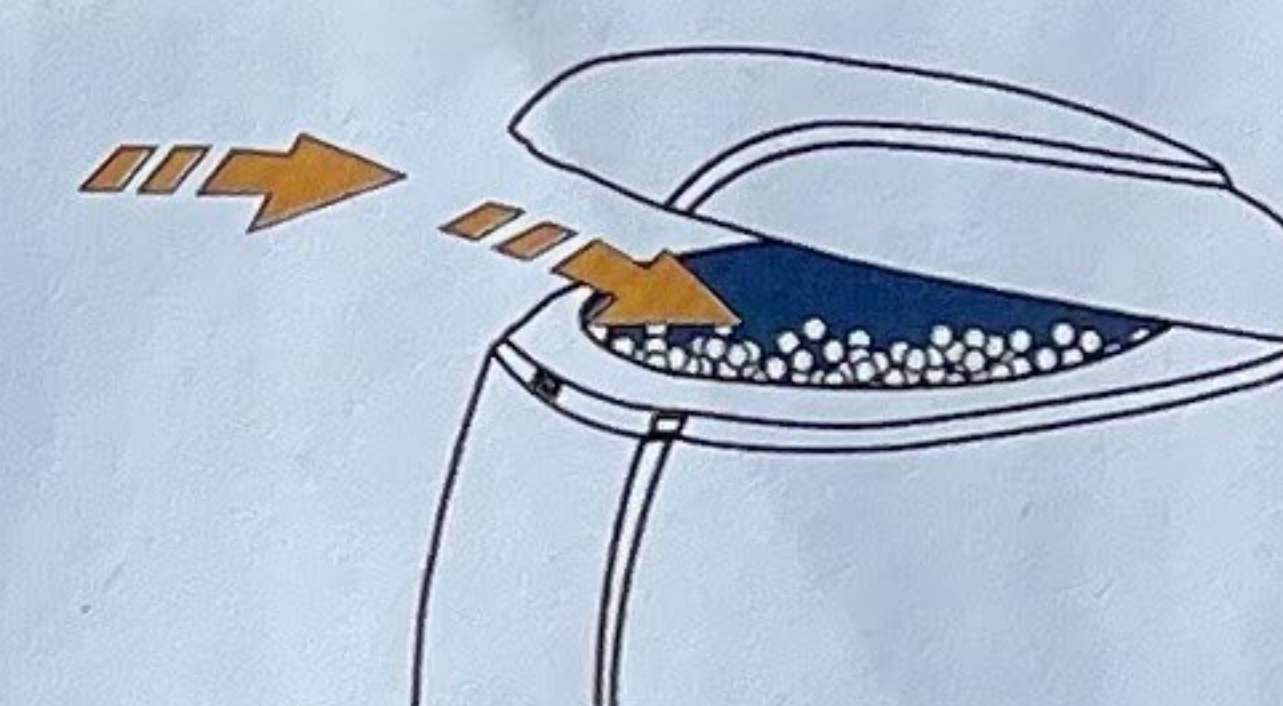

- S baffle
The feed is 2-4mm in diameter and can be fed for 15-20g per second.
- M baffle
The feed is 4-6mm in diameter and can be fed for 15-20g per second.
- Without baffle
The feed is 6-9mm in diameter and can be fed for 30-38g per second.

04 INSTALLATION SETTING

1. The battery compartment is on the bottom, open it then put in 4 x C alkaline batteries. (Do not use rechargeable or carbon batteries.)
2. The feeder can be placed directly near the fish pond, and it can also be fixed to the plank by using plastic board.
3. Place the pond feeder above the water which following picture shows can reduce the rats problem.

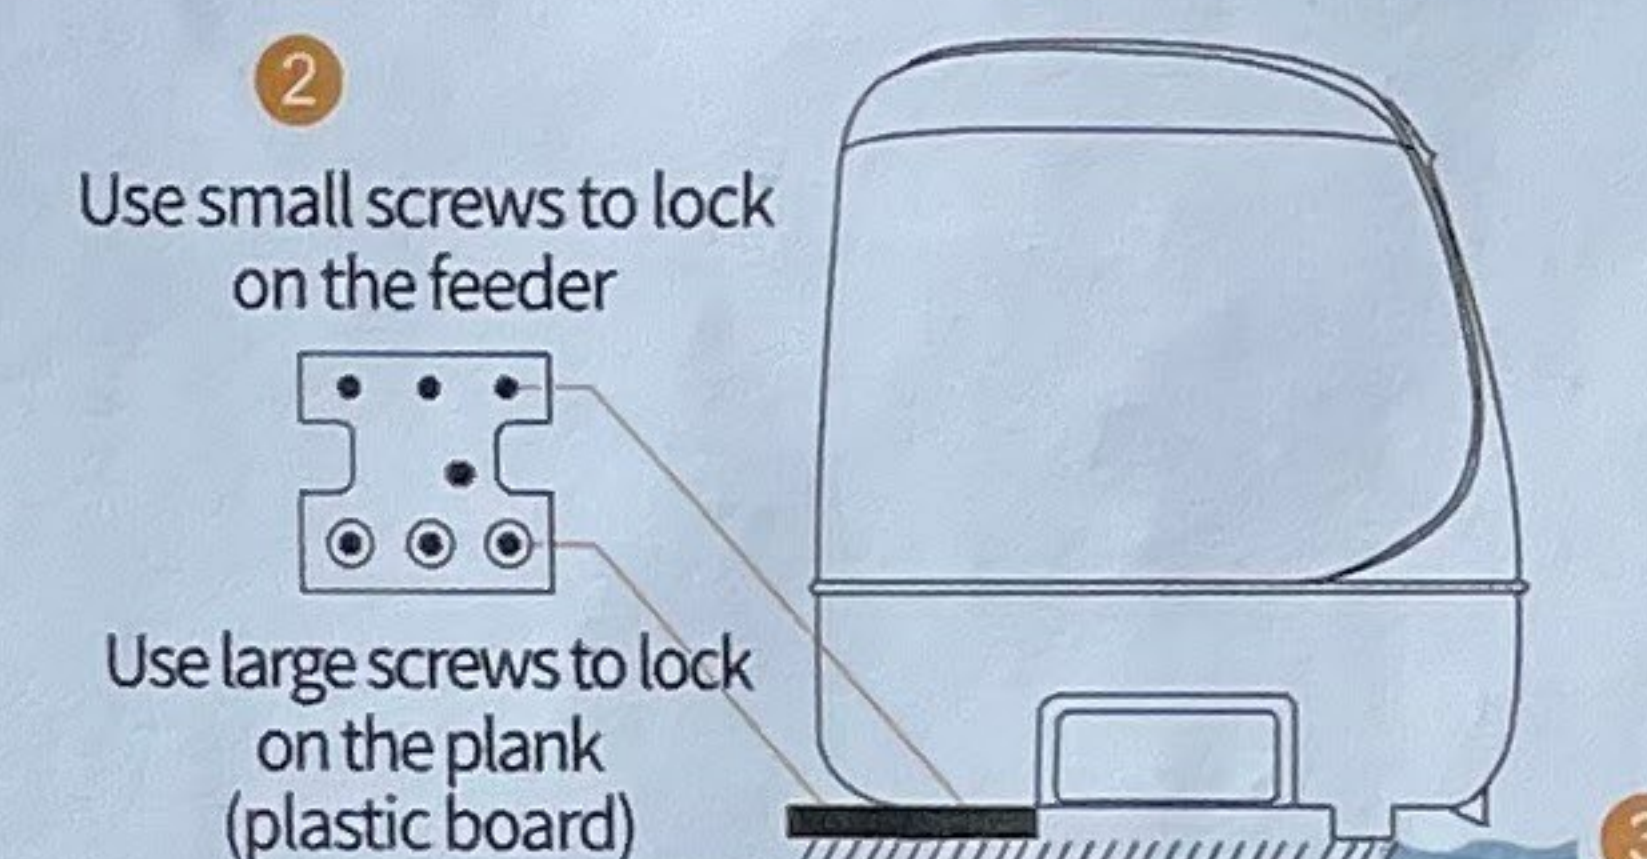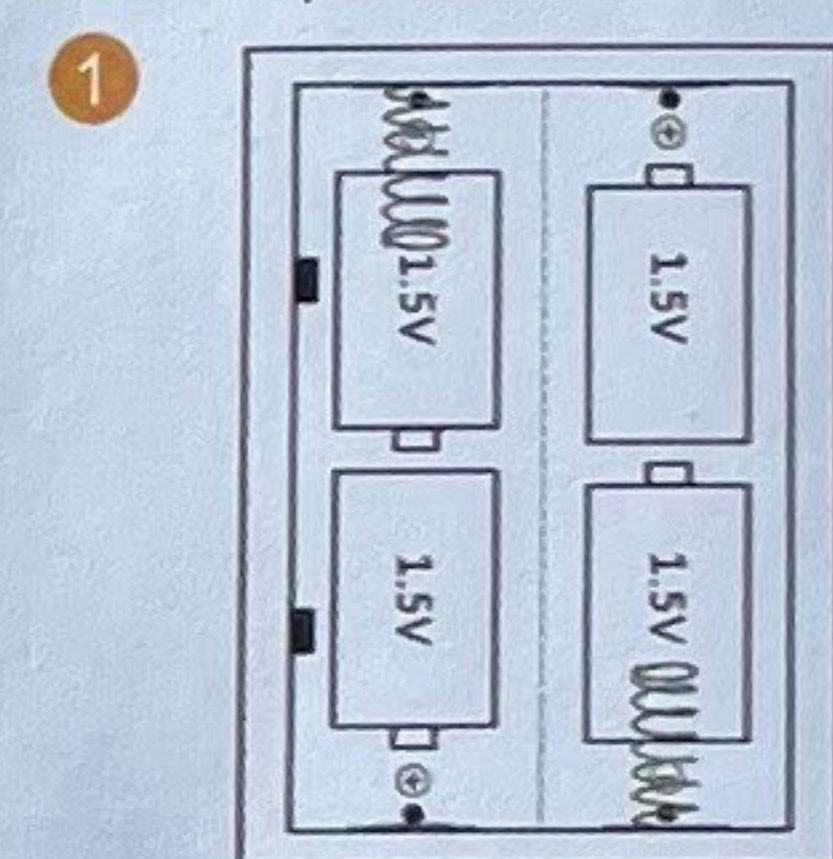

05 PRECAUTIONS

1. Safety

- 1) Read instruction carefully before usage.
- 2) Pond feeder is suitable for outdoor use.
- 3) Prevent feeder from dropping into the water.

2. Maintenance

- 1) Always keep food container clean and dry.
- 2) Always remove moisture and old food.
- 3) Please remove batteries from pond feeder before storage.

3. Trouble diagnosis

- 1) Equipment does not work
 - a. Please check whether alkaline batteries are used, ensure the battery power is sufficient and the battery is not up to the restricted date. (Generally there has a limiting date label on the bottom of the negative electrode of the battery).
 - b. Please check whether the anode and cathode of batteries are installed correctly and whether using rechargeable batteries.
 - c. Please check whether the baffle of the ⑤ built-in outlet is installed correctly, and then check whether the ⑥ outlet of the feeder is blocked (if blocked, please clean it as soon as possible), so as to ensure that ⑥ the flexible discharge unit can rotate normally (if there is a fault, please replace it as soon as possible).
- 2) Low power mode
if the LCD display shows "LO" which is a low battery alarm, please replace the battery as soon as possible.
- 3) If food gets stuck in the food release port, remove the baffle.
- 4) Choose the size of the baffle to suit the food size.
- 5) If LCD displays an unusual text indicates that the battery is low, need to change the battery or charge it.